



P.O. Box 538
East Granby, CT 06026
Ph: (860) 844-0101
www.WildlifeControlSupplies.com

E-Z Catch Remote Fire Trap with Remote Trap Trigger

The E-Z Catch Remote Fire Trap (with Remote Trap Trigger) was designed for on-site manned capture of targeted animals (FIG 8). The trap base frame measures 36 x 36 with a net depth of approx 18". The metal base is powder coated to prevent rust. **Maximum Effective Range (M.E.R.)** is typically 100' to 150' although it has been successfully tested up to 200'. Maximum range is dependant on terrain or other interference between Trap Trigger Device and Remote.

Item Code: WCSRC36-Remote
WCS EZ Catch - 36" x 36" x 2.5" (with 1 Key Fob)

Product Installation & Operation

- 1: Install 8 AA batteries into Trap Trigger Device (Fig 1 & 2).
- 2: Install Trap Trigger device on to the E-Z Catch frame with wing nuts provided (Fig 3 & 4)
4. Press Trap Trigger plunger into device to leave guide clear for setting rod.
5. Setting trap: swing setting rod away from trap and fold spring-loaded half of trap over. Pull back net to keep clear of Trap Trigger device. Flip setting rod over folded half of trap and place in setting rod guide (Fig 5). Net should form a V pattern when trap is set.
6. Extend Trap Trigger plunger over setting rod (Fig 6). *IMPORTANT NOTE: DO NOT extend plunger all the way over to touch the setting rod guide. Extend plunger just enough to hold setting rod in place, there must be space between plunger and setting rod guide or trap will not fire (Fig 6).*
7. Place bait on pan.
8. Turn Trap Trigger device on with ON/OFF switch located on the side of the unit (Fig 7). The LED will indicate if unit is on (green light lit) or off. Trap is now ready to fire.
9. Trap Trigger device is activated by pressing button on Remote only.
10. Trap Trigger device has a 4 second hold time between each trip. Unit cannot be reset until the 4 second hold time has expired.

WARNING: Keep head and body parts away from E-Z Catch when setting and once set as trap may fire if not set correctly. Remove battery pack when unit is not in use for an extended period of time.



P.O. Box 538
East Granby, CT 06026
Ph: (860) 844-0101
www.WildlifeControlSupplies.com

Helpful Hints:

- A. Each Trap Trigger unit will have it's own unique **Maximum Effective Range**. Typically the M.E.R. is approximately 125'. Ranges of up to 200' can be obtained. For extended range remove Trap Trigger top (Fig 1) and extend antenna through small hole (Fig 7) located on side of unit. Form antenna straight up.
- B. Battery life will diminish M.E.R.
- C. Use a grease lubricant on setting rod where it meets the plunger
- D. Place plunger over half of setting rod. Do not move plunger completely over rod.
- E. Two Trap Triggers cannot be activated simultaneously. They must be activated one at a time.
- F. Turn off unit when not in use. There is a power drain on the batteries when the LED is on.
- G. Each Trap Trigger will activate **ONLY** with the Remote that came with the unit. You can not interchange Remotes.
- H. Replacement Remotes are available.

(Scroll down to next page for pictures)



(FIG 1)



(FIG 2)




(FIG 3)




(FIG 4)




(FIG 5)

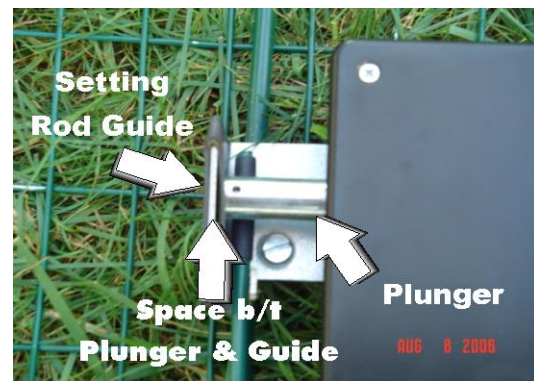

(FIG 6)

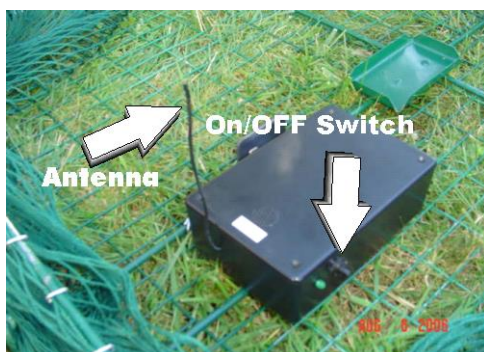

(FIG 7)

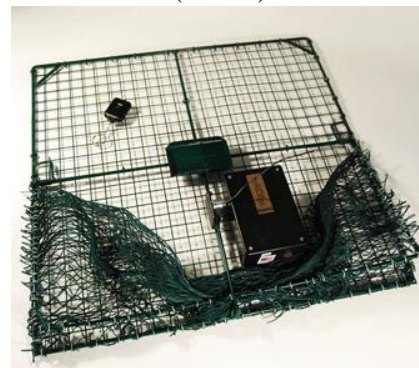

(FIG 8)