











# Replacing the Springs on a KORO Live Beaver Trap

<p><b>Step 1:</b> Place trap on a workbench or on the floor, screen side down.</p>	
<p><b>Step 2:</b> With a pair of rounded jaw vise grips release springs from chain link frame. (Fig. 1)</p>	 <p>Fig. 1</p>
<p><b>Step 3:</b> Fold the chain link frame back against the triangular frame. (Fig. 2)</p>	 <p>Fig. 2</p>
<p><b>Step 4:</b> Crisscross the spring arms and clamp with a pair of rounded jaw vise grips. (Fig. 3)</p>	 <p>Fig. 3</p>

## Replacing the Springs on a KORO Live Beaver Trap

<p><b>Step 5:</b> Remove the bolts (as shown in Fig. 4) and maneuver the spring out from the screened frame. Then replace with the new spring in reverse order of how you removed the old spring.</p>	 <p>Fig. 4</p>
<p><b>PREPARING THE SPRING</b></p>	<p><i>Steps 6 through 8</i></p>
<p><b>Step 6:</b> Place a piece of 1" square tubing in a vise. Place the spring on the vise with the tube through the center of the spring coil. Put the spring in position so it can be compressed inward. (Fig. 5)</p>	 <p>Fig. 5</p>
<p><b>Step 7:</b> Compress the spring together and lock the arms. (Fig. 6)</p>	 <p>Fig. 6</p>

## Replacing the Springs on a KORO Live Beaver Trap

<p><b>Step 8:</b> Crisscross the spring arms and lock on a pair of rounded jaw vise grips. (Fig. 7)</p> <p><b><u>NOTE: WHEN HANDLING THE SPRING, ALWAYS HOLD ONTO THE VISE GRIPS!</u></b></p>	 <p>Fig. 7</p>
<p><b>Step 9:</b> Once the new spring is in place, you can release the vise grips. (Fig. 8).</p> <p><b><u>NOTE: WHEN HANDLING THE SPRING, ALWAYS HOLD ONTO THE VISE GRIPS!</u></b></p>	 <p>Fig. 8</p>
<p><b>Step 10:</b> Fold the chain link frame back onto the screened frame. (Fig. 9)</p>	 <p>Fig. 9</p>
<p><b>Step 11:</b> Reload the springs. (Fig. 10)</p>	 <p>Fig. 10</p>