

Pictured below are different styles of trim rings and baffles most commonly used for Recessed Light Fixtures (can lights). Turner "No-Pest" Light Covers will fit virtually any style of trims on all Recessed Light Fixtures.



Pictured below are the 3 parts to the Turner "No-Pest" Light Covers.



TRIM RING



MOUNTING RING



POLYCARBONATE SCREEN




### HOW TO INSTALL :

1). Simply place the Mounting Ring around the existing trim ring on your Recessed Light Fixture, now using the screws provided attach the Mounting Ring to the ceiling around the existing trim. Be sure not to overtighten the screws (just hand tighten).

2). Take the "No-Pest" Trim Ring and make sure that the Polycarbonate Screen is snap into place on the Trim Ring.

The Polycarbonate Screen will be secured to the Trim Ring by using the 3 holding tabs (this will be a tight fit).

3). Last, take the "No-Pest" Trim Ring with the Polycarbonate Screen attached and align the outer tabs on the Trim Ring to the slots on the Mounting Ring once this done simply turn the "No-Pest" Trim Ring and this will lock the Trim Ring into place (right to tighten, left to loosen).

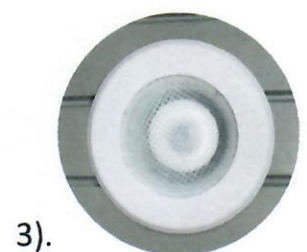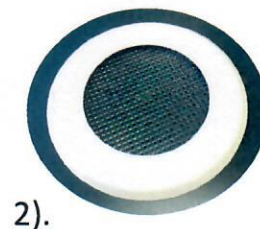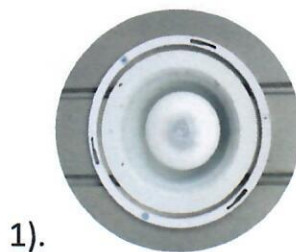


### Optional Mounting:

You can mount the Turner "No-Pest" Light Covers without using your existing trim ring and baffles that are in place. Simply remove your light bulb first and then remove your existing trim ring and baffle. Some Recessed Light Fixtures will have a Trim Ring that the light socket is attached to, remove the socket and reattach to the top (inside top) of the Recessed Light Fixture, usually there is a mounting screw and a slot for the socket to attach to. Once this is done you can now attach the Mounting Ring to the ceiling around the opening (center it) and install the Trim Ring with screen attached.



Recessed Light Fixture with the trim and baffle removed.  
Mounting ring attached to the ceiling and centered.

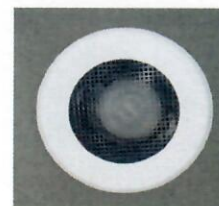

Turner "No-Pest" Light Cover with screen attached and mounted.